


How to get your Mini-split Air Conditioner ready to be moved to a new location

In the event that you need to move your Mini-split A/C to another room or to another house, just follow these instructions so as not to lose the Freon from the unit and have it ready for re-installation

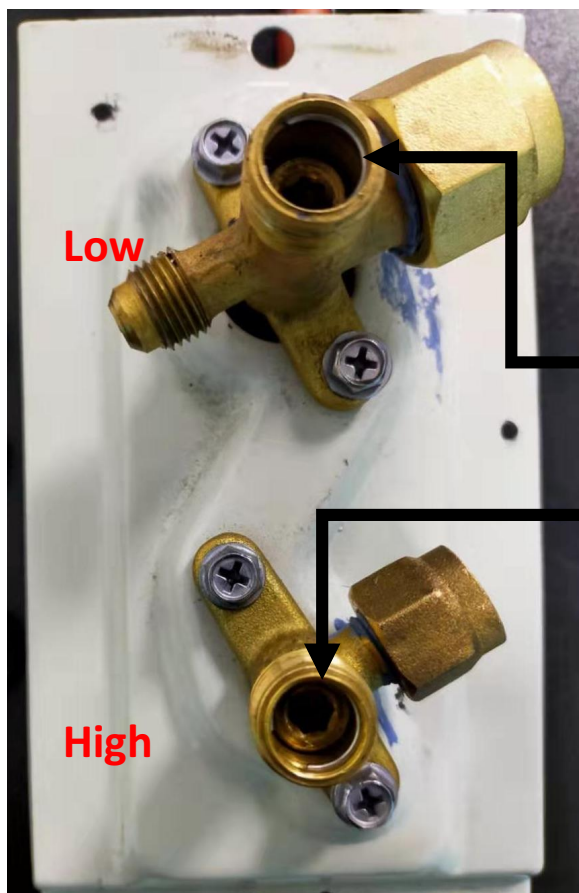

- 1, Turn On the unit and set it to Cool Mode (60°F) for 5 minutes
 - 2, While the unit is running, close the High Pressure Valve. Wait 1 Minute
 - 3, After 1 Minute, quickly close the Low Pressure Valve
 - 4, Turn Off the A/C Unit
 - 5, Disconnect the AC power wire to the Compressor unit and disconnect the Power/Signal wire from Indoor to Outdoor units
 - 6, Carefully un-screw the copper tubing lines so as not to put any kinks on them.
- The Compressor unit is now ready to be moved